

TipTopTemp®

Grill like never before

Controls the temperature for Long,
Slow Grilling & Smoking

- Automatically regulates the temperature
- Controls the airflow automatically
- No batteries or electricity needed
- Do not use on gas grills
- For charcoal grills only



Made in U.S.A.

Perfect for low and slow cooking

CERAMIC5R
Fits 5"/13cm Removable Vent
2" WIDE BAND INCLUDED

TipTopTemp®
Grill like never before



0095779145038



CR5

CERAMIC5R
Fits 5"/13cm Removable Vent
2" WIDE BAND INCLUDED

Thank you for purchasing a TipTopTemp barbecue temperature controller. Always use a digital thermometer and external probe to continuously check your grill. The TTT controls the temperature by limiting the airflow. Mounting the TTT will vary by grill model, but the general rule is to slide the red band slightly off the housing enough to make contact with the grill creating an air seal.

To begin:

Load the grill and light a small amount of briquettes.

Too many lit coals are hard to control.

Open bottom vent 50%, this will need adjusting depending on grill depth and desired temperature.

Close the grill lid and mount the TTT over the lid vent. Use the knob to open the damper, do not force or over-turn.

Damper will start to close as the device warms. Re-open damper several times during warm-up until damper quits moving. Damper is now at the same temperature as the grate.

Close damper 90% when grill is 50 degree **below** desired grate temperature.

TTT will start controlling the temperature by limiting the airflow. Let the TTT do the rest while the temperature stabilizes. Fine tune the desired temperature by adjusting the damper as needed. Temperature changes take time, make small adjustments and allow several minutes between each adjustment.

Temps are not stable? Grilling requires air and fuel. High grill temperatures and deep grills require more air. Increase bottom venting if the temps fall during start-up. Close bottom vent if temps rise uncontrolled.

Proudly made in the U.S.A.